

# AN1269: Dynamic Multiprotocol Development with *Bluetooth*<sup>®</sup> and Proprietary Protocols on RAIL in GSDK v3.x and Higher

This application note provides details on how to develop a multiprotocol application running Bluetooth and a proprietary protocol at the same time, using SDKs from Gecko SDK Suite v3.x. First, the criteria for the coexistence of Bluetooth and a proprietary protocol are discussed. Then the application note guides you through how to create a new DMP application, how to configure Bluetooth and your proprietary protocol, and how to transmit and receive proprietary packets while Bluetooth is running. Finally, a Light/Switch DMP example is introduced in more details. For background on Dynamic Multiprotocol Application development in general and about Bluetooth task priorities and scheduling, see *UG305: Dynamic Multiprotocol User's Guide*.

#### KEY POINTS

- Generic guidelines for protocol coexistence
- Generating and configuring a new Bluetooth/Proprietary DMP project
- Sending and receiving proprietary packets
- Using RAIL priorities
- Building and understanding the Light/ Switch DMP example

## 1. Introduction

*UG305: Dynamic Multiprotocol User's Guide* provides information about the Dynamic Multiprotocol solution, where two protocols are running on the same device in parallel, and includes general background as well as information on Bluetooth task priorities and time scheduling. This application note introduces the Bluetooth / Proprietary multiprotocol solution. It assumes that the reader is familiar with the principles of Dynamic Multiprotocol and with all the terms related to it. The Dynamic Multiprotocol projects require an RTOS for scheduling. Currently, the Micrium RTOS and the FreeRTOS are supported. The FreeRTOS is included in the SDK.

#### 1.1 Requirements

To be able to use all the features discussed in this document, you will need the followings installed on your computer:

- Bluetooth SDK version 3.0.0 or higher
- (optional\*) Micrium OS-5 kernel

To be able to run the Light/Switch example, you will need the following installed on your computer:

- Bluetooth SDK version 3.0.0 or higher
- Flex SDK version 3.0.0 or higher
- (optional\*) Micrium OS-5 kernel
- (optional\*) IAR Embedded Workbench for ARM (IAR-EWARM) (required for the Flex (RAIL) Switch application). See the release
  notes for the Bluetooth SDK for the required IAR-EWARM version.

\*Required only when the Micrium RTOS is used.

## 2. Guidelines for Bluetooth and Proprietary Coexistence

When you start implementing a Bluetooth / Proprietary DMP application, the first thing to consider is if your proprietary protocol is compatible with Bluetooth. Here are some guidelines that you should always consider:

- Bluetooth is deterministic. The huge advantage of the Bluetooth protocol in a DMP scenario is that it does not send and receive packets at random times, but at predefined time instances always at the start of a connection interval. This means, among other things, that Bluetooth does not need a background receive, and your proprietary protocol can receive in the background, of course with some interruptions.
- Bluetooth needs time accuracy. The consequence of predefined time instances is that Bluetooth radio operations need very
  accurate timing. Radio operation timing needs 500 ppm accuracy. If you delay a Bluetooth packet, it will not be received on the
  other side. So in case of collision with a proprietary packet, either the proprietary packet has to be delayed, or one of the packets
  has to be dropped.
- Bluetooth connection is active. Once a Bluetooth connection is established, the connection is kept alive by sending and receiving at least an empty packet every connection interval. Consequently, your proprietary protocol needs to be prepared to be *interrupted* every connection interval. You can, however, set the connection interval to a long period if you do not need low Bluetooth latency. You can also use the peripheral latency parameter to make Bluetooth communication less frequent on the peripheral side.
- Bluetooth uses short packets. If there is no data to be sent, the Bluetooth connection is kept alive by empty packets. An empty packet takes 80 μs to be sent out on 1M PHY, and 40 μs on 2M PHY. Empty packets sending + inter frame space + empty packet receiving takes 80 + 150 + 80 = 310 μs or 40 + 150 + 40 = 230 μs. This is the usual time needed by Bluetooth in every connection interval. The largest Bluetooth packet has a 257 byte payload which takes 2120 μs to be sent on 1M PHY and 1060 μs on 2M PHY. Along with receiving an empty response packet, this takes 2120 + 150 + 80 = 2350 μs on 1M PHY and 1060 + 150 + 40 = 1250 μs on 2M PHY.
- Bluetooth uses packet chains. If the data to be sent does not fit into one packet, Bluetooth communication can be extended within a connection interval; that is, you can expect that more than one packet is sent and received in an interval, but this is rare.
- Bluetooth is robust. If a Bluetooth packet cannot be sent, then it will be *retransmitted in the next connection interval*. If a Bluetooth packet is received with a *CRC error, it is always signaled by the other side* by not sending a response packet. Again, the packet will be retransmitted in the next connection interval. The only limit is the supervision timeout. If there is no successful transmission within the supervision timeout, then the connection is dropped. In other words, Bluetooth communication *can be subdued by higher priority radio tasks for a time interval shorter that the supervision timeout*.

**Summary:** When implementing your DMP protocol, you have to take into account that Bluetooth will need the radio every connection interval for a short time (230  $\mu$ s – 2350  $\mu$ s). Bluetooth needs accurate timing, so Bluetooth packets cannot be delayed. The Bluetooth packets can interrupt both your packet sending and packet receiving. Therefore, the proprietary protocol should implement acknowl-edgement and retransmission mechanisms, or a deterministic timing that is interleaved with the Bluetooth communication. Bluetooth communication can be subdued by a higher priority radio task for a time interval shorter than the supervision timeout.


## 3. Software Architecture of a Bluetooth / Proprietary DMP application

DMP applications require an RTOS. The RTOS helps run the Bluetooth and Proprietary protocols in parallel and independently. In this document, the term RTOS refers both to the Micrium RTOS and the FreeRTOS, included with Silicon Labs Bluetooth SDK version 3.1.0. The adaptation layer has been designed to work with Micrium RTOS and FreeRTOS.

Since the Bluetooth stack itself is just a collection of functions, Bluetooth needs separate tasks to run the stack. The BluetoothTask() and the LinkLayerTask() are responsible for this, and they can be used as they are. The functions of the Bluetooth stack can be accessed through these tasks using BGAPI, as in the case of an RTOS-less or an NCP application. The Bluetooth application (handling Bluetooth events and calling Bluetooth commands) has to be implemented by the developer in  $sl_bt_on_event()$ , which is (indirectly) called from the  $sl_bt_event_handler_task()$ . For details, refer to AN1260: Integrating v3.x Silicon Labs Bluetooth® Applications with Real-Time Operating Systems.

The proprietary protocol is implemented in the  $app\_proprietary\_task()$ . Unlike Bluetooth, the proprietary protocol can access the radio directly through the RAIL API. RAIL events need a callback function  $-sl\_rail\_util\_on\_event()$  – to be defined. This function is called every time a new RAIL event is generated, and can notify the application about the event. Note:  $sl\_rail\_util\_on\_event()$  is called from interrupt context, so only time-critical functions should be implemented in it. Everything else should be done in the application.

Although the Bluetooth and Proprietary applications are independent, they can communicate using inter-process communication (IPC).

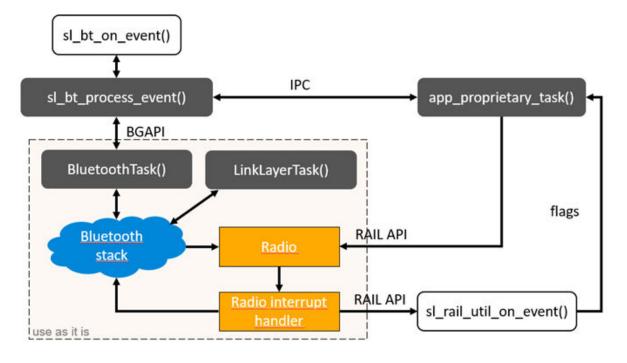

## 4. Developing a Bluetooth / Proprietary DMP Project

Three steps are required when developing a Bluetooth / Proprietary DMP project:

- 1. Create the project.
- 2. Configure Bluetooth.
- 3. Configure the Proprietary Protocol.

#### 4.1 Create a New Project

Silicon Labs Bluetooth SDK (v3.2 or later) include four software samples, which can be used as a starting point for every Bluetooth / Proprietary application.

- Bluetooth SoC Empty RAIL DMP FreeRTOS
- Bluetooth SoC Empty RAIL DMP Micrium OS
- Bluetooth SoC Empty Standard DMP FreeRTOS
- Bluetooth SoC Empty Standard DMP Micrium OS

Each sample:


- Includes the multiprotocol RAIL library
- · Includes the Bluetooth library
- Includes the selected RTOS
- Has a default Bluetooth GATT database configuration
- Has a default RAIL configuration
- · Has a default RTOS configuration
- Implements Bluetooth initialization
- · Implements RAIL initialization
- · Implements RTOS initialization

The sample types differ in that the 'RAIL' samples contain a radio configurator, so they can be used for any proprietary protocol, whereas the 'standard' samples uses the IEE802.15.4 standard protocol.

The only thing you have to do is to modify the configurations according to your needs and implement the Bluetooth application task and the Proprietary application task. As default, the app\_proprietary\_task() is defined and implemented in the files *app\_proprietary.c* and *app\_proprietary.h*.

For the Bluetooth part, the default implementation contains the Bluetooth event handler, the sl\_bt\_on\_event() function, defined in the app\_bluetooth.c file.

The GATT database can be configured with the visual GATT Configurator in Simplicity Studio 5, while the RAIL configuration can be generated with the Radio Configurator tool. You may also need to add some **emlib** and **emdrv** files to your project to support peripheral configuration. The general workflow to create a DMP project looks like this:

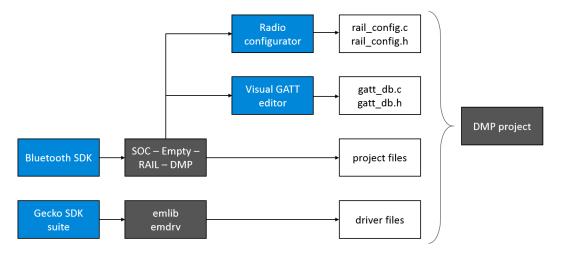

To create a new project.

- 1. Open Simplicity Studio 5.
- 2. Select a connected device in the Debug Adapters view, or select a part in the My Products view.
- 3. Click File > New > Silicon Labs Project Wizard.
- 4. Review your SDK and toolchain. If you have more than one GSDK version installed, verify that Gecko SDK Suite v3.x is shown. If you wish to use IAR instead of GCC, be sure to change it here. Once you have created a project, it is difficult to change toolchains. Click **NEXT**.
- 5. On the Example Project Selection dialog, filter on Bluetooth and select **Bluetooth SoC Empty RAIL DMP FreeRTOS**. Click **NEXT**.
- 6. Name your project. Click [FINISH].

#### 4.2 Configure Bluetooth

Configuring Bluetooth consists of two steps:

- Configuring the local GATT database
- · Configuring the Bluetooth stack

To configure the local GATT database, use Simplicity Studio 5's GATT Configurator.

- 1. Open the .slcp file in the project (if it is not already open).
- 2. Click the CONFIGURATION TOOLs tab.
- 3. Click Open next to Bluetooth GATT Configurator.

	🔿 💌 📷 🏦 Welcome 😗 Recent 🏢 Tools 🔮 Install 🏚 Preferences	😰 🖉 Launcher { Simplicity IDE
🍋 Project Explorer 🛛 📄 🖻 🗆	🚢 soc_empty_rail_dmp_freetos.stcp 🔅	- C
✓ (2) config > (2) btconf ✓ (2) rail	soc_empty_rail_dmp_freertos OVERVIEW SOFTWARE COMPONENTS CONFIGURATION TOOLS	
(@) radio_settings:radioconf > ≧ app.asset.config.h > ⋛ dmadrv_config.h > ⋛ emilib_core_debug.config.h > ⋛ ferRIOSConfig.h	Bluetooth GATT Configurator	🈋 Open
<ul> <li>&gt; M mbetits_configh</li> <li>&gt; M pin_configh</li> <li>&gt; M pin_configh</li> <li>&gt; M pla_toynet_configh</li> <li>&gt; M st.butetooth_advertise_configh</li> <li>&gt; M st.butetooth_configh</li> </ul>	Description The GATT database is the heart of your Bluetooth application. It exposes profiles, services and characteristics to be a GATT Configurator is a simple-to-use tool to help you build your own GATT database with an intuitive GUT instead of cod of adding profiles/services/characteristics defined by the Bluetooth STG as well as defining custom ones. For detailed Configurator User's Guide for Bluetooth STK v3.x.	ling. It provides the possibility
> m st.device_init_mmu_configh       > m st.device_init_thico_configh       > m st.device_init_thico_configh	Pin Tool	°ç Open
Debug Adapters         B::         Outline         III           %         X         III         IIII         IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	Description Graphical tool for configuring pins on your hardware.	
	Radio Configurator	😋 Open
	Description Graphical tool for configuring the radio with one or more phy configuration.	
	Problems 🛙 🔗 Search 🐊 Call Hierarchy 📮 Console	7 i ° c
	a reaction of proceeding to proceed a considered of the considered	- v o
	Description Resource Path Location Type	
	694M of 965M	î.

- 4. Add your custom services and characteristics as described in *QSG169: Bluetooth*® *SDK v3.x Quick Start Guide* (or use the default GATT database).
- 5. Your changes are automatically saved and project files are generated.

🚢 soc_empty_rail_dmp_freertos.slcp 🛛 😵 gatt_configuration.btconf 🖂	
Bluetooth GATT Configurator	View Manual
> <b>×</b> + <b>x</b> «	
P Custom BLE GATT	P Custom BLE GATT ?
▼ 5 Generic Access	Custom GATT name
C Device Name	Custom BLE GATT Capability declarations + Add
C Appearance     S Device Information     Manufacturer Name String     System ID	Generic Attribute Service     GATT Caching
Contributed items (j)	Generic Access         1800       org bluetooth.service.generic_access         O Device Name       Edit         O Appearance       Edit
	Device Information           180A         org bluetooth: service.device_information           VEdit         Vedit
	O Manufacturer Name String  Zedit O System ID Zedit
	Silicon Labs OTA - ota 10140565:F063:4FA1-BFA4-BF47842119F0 com.silabs.service.ota
	O Silicon Labs OTA Control

#### To configure the Bluetooth stack:

- 1. Go to the SOFTWARE COMPONENTS tab.
- 2. Find Bluetooth > Stack > Bluetooth Core component.

🚢 soc_empty_rail_dmp_freertos.slcp 🛛 ଃ gatt_configur	ration.btconf		
soc_empty_rail_dmp_freertos	OVERVIEW SO	FTWARE COMPONENTS CONFIGURATION TOOL	S
<b>Y</b> Filter : Configurable Components	Installed Components	Components Installed by You	Search keywords, component's name bluetooth core 🚳
▼ Bluetooth		Bluetooth Core	📩 Configure
▼ RTOS			
⊘ Bluetooth Core	٥		^ ^
▼ Stack		Description Bluetooth Low Energy stack and configurations	
O Bluetooth Core	•	In addition to this core component, select featur	res needed by the application.
⊘ Bluetooth Core Crypto		Quality PRODUCTION	

3. Change the configuration according to your needs. For details, see *UG434: Silicon Labs Bluetooth*® *C Application Developers Guide for SDK v3.x* (or use the default configuration).

Blu	etooth Core		View Source	×
»	Bluetooth Stack Configuration Max number of software timers	Buffer memory size for Bluetooth stack		
	TX Power Levels Minimum radiated TX power level in 0.1dBm unit	Maximum radiated TX power level in 0.1dBm unit		
	RF Path RF TX path gain in 0.1dBm unit	RF RX path gain in 0.1dBm unit		

#### 4.3 Configure the Proprietary Protocol

#### 4.3.1 Using the Radio Configurator

Configuring the proprietary protocol consists of two steps:

- Configuring the radio channels (base frequency, modulation, and so on)
- Configuring the RAIL

To configure the radio channels, use Simplicity Studio 5's Radio Configurator tool:

- 1. Open the .slcp file in the project (if it is not already open).
- 2. Click the CONFIGURATION TOOLS tab.
- 3. Click Open next to Radio Configurator.

File Edit Navigate Search Project Run Window Help								
🏘 + 💁 + 🛅 + 🔛 🔞   🛞 + 🗞 + 🛃 + 🖓 + 🕫 🔶 +	े 📲 🛃	🕚 🏫 Welcome 🕑 Recent 🏢 Tools	🛃 Install 🔅 P	references			E   2	A Launcher {} Simplicity IDE
Project Explorer 🛛 📄 😓 🍸 🖇 🖓 🖿	soc_em	pty_rail_dmp_freertos.slcp 🛛						- 0
∨	soc	_empty_rail_dmp_freertos	OVE	RVIEW S	OFTWARE COM	PONENTS	CONFIGURATION TOOLS	
> is become ✓ (> rail								
in adio_settings.radioconf								
> h app_assert_config.h	Ь	uetooth GATT Configurato					÷	
> h dmadrv_config.h > h emlib_core_debuq_config.h		detootil GATT Configurato					· · · · · · · · · · · · · · · · · · ·	Open
> h FreeRTOSConfig.h								
> h mbedtls_config.h								
> h pin_config.h	De	scription						
> h psa_crypto_config.h > h sl_bluetooth_advertiser_config.h	Th	GATT database is the heart of y	our Bluetooth	application	n. It exposes pro	files, servio	ces and characteristics to be accessed by remot	e devices. The
> h sl_bluetooth_config.h							an intuitive GUI instead of coding. It provides	
> h sl_bluetooth_connection_config.h	of	adding profiles/services/charact	eristics defi	ined by the B	Bluetooth SIG as	well as defin	ning custom ones. For detailed description see	UG438: GATT
> h sl_board_control_config.h	Co	afigurator User's Guide for Bluet	ooth SDK v3.>	κ.				
> h sl_bt_rtos_config.h > h sl_device_init_dcdc_config.h								
> h sl_device_init_emu_config.h								
> 🗟 sl_device_init_hfxo_config.h								
> In sl_device_init_lfxo_config.h	P	n Tool					· · · · · · · · · · · · · · · · · · ·	Open
> h sl_iostream_usart_vcom_config.h > h sl memory config.h								
S S my25 flash shutdown usart confin h								
< >>								
		scription						
\$ 🗙 😂 🗷 🗙 🌣 - 🗔 🖻 🕀	Gr	aphical tool for configuring pins	on your hard	iware.				
> 🜵 EFR32MG12 2400/915 MHz 19 dBm RB (ID:440050127)								
	l p	adio Configurator					÷.	0
		dio comgutator					¢	Open
	De	scription						
	Gr	aphical tool for configuring the	radio with or	ne or more pi	hy configuration.			
	Dashia	ns 🕅 🛷 Search 🛛 🍃 Call Hierarchy	Console					7:-0
	0 items	is is in the search and the search a	Console					080
	Descriptio	^	Resource	Path	Location	Туре		
1								
, · · · · · · · · · · · · · · · · · · ·							684M of 965M	

4. Select Base Profile from the radio profiles.

5. Select a predefined radio PHY from the list, or select **Customized**, and apply your settings. For details, see AN1253: EFR32 Radio Configurator Guide for Simplicity Studio 5.

oc_empty_rail_dmp_freertos.slcp 🚯 gatt_config Radio Configurator	uration.btconf 😡 radio_settings.radi						Search		Q	View Ma	anual
P Protocol Configuration	General Settings		×	Cł	annels Overview					×	(
Channel Group 1	Protocol name			Na	ma	Start	channel	Stop o	hannel		
General Settings	Protocol Configuration			Nd	me	No.	Frequency	No.	Freque	ъсу	
Channels Overview	C variable name Protocol_Configuration			Ch	annel Group 1	0	915.00 Mhz	20	935.00	Mhz	
	Select radio profile Base Profile	•									
	Select radio PHY 915M 2GFSK 500Kbps 175K	•									
	Customized	0									

#### To configure RAIL:

1. On the Software Components tab, select Platform > Radio > RAIL Utility, Initialization > inst0.

soc_empty_rail_dmp_freertos OVER	W SOFTWARE COMPONENTS CONFIGURATION TOOLS	
Filter:         Configurable Components         Installed Components	Apponents Components Installed by You	ne
▼ Platform	inst0 Configure	•
► Board		
<ul> <li>Board Drivers</li> </ul>	Description	
► Bootloader	Utility to aid with RAIL Initialization Support	
► CMSIS	Quality	
► Common	PRODUCTION	
► Device		
► Driver	Open in Browser	
► Machine Learning	Initialization Utility	
► Middleware		
► Peripheral	RAIL Initialization Utility	
<ul> <li>▼ Radio</li> <li>▼ RAIL Utility, Initialization</li> </ul>	This optional software component can be enabled to include default functionality related to RAIL initialization configuration.	
⊘ inst0	Note: Multiple instances of this component can be enabled in application code. This is particularly	Ŧ
⊘ RAIL Library, Multiprotocol	X Uninstall     Add New Instances     View Dependencies & Instances	s

2. Click **Configure**. Change configurations as needed.

L Utility, Initialization (inst0)		View Source
IL Init Configuration		
Initialize RAIL		•
Project Configuration		
Enable Radio Configurator Support (include rail_config.c/h generated by Radio Config)	Enable Bluetooth Support	Enable Scheduler Support (for DMP)
Enable RAIL Init Complete Callback		
Protocol Configuration		•
Radio Configuration		
Default Radio Configuration		dio Config Index (if Proprietary radio config selected, use
Proprietary (use rail_config.c/h) 💌	index X of cha	nnelConfigs[X])

#### 4.3.2 Using Standard Protocol APIs


In the "Bluetooth - SoC Empty Standard DMP" sample project, the radio is configured with APIs. The sample project contains a default configuration for the IEE802.15.4 standard protocol. This configuration is set in the function "*app\_proprietary\_init()*". For more information about the possible configurations, refer to the API documentation on docs.silabs.com.

#### 4.4 Develop Bluetooth Application

Bluetooth applications have to be implemented the same way as in a non-DMP scenario:

- · BGAPI commands can be called from anywhere (except from interrupt context!)
- BGAPI events have to be fetched from the internal event queue of the Bluetooth stack. This is typically done in an infinite loop.

A single protocol Bluetooth application can run with or without RTOS. The DMP Bluetooth application can, however, only run over RTOS. As described in section 3. Software Architecture of a Bluetooth / Proprietary DMP application, you must implement Bluetooth event handling in the Bluetooth application task. The skeleton of this task is implemented in main.c. To handle new Bluetooth events, simply add new case statements with the appropriate event IDs. The general process can be seen in the following figure:

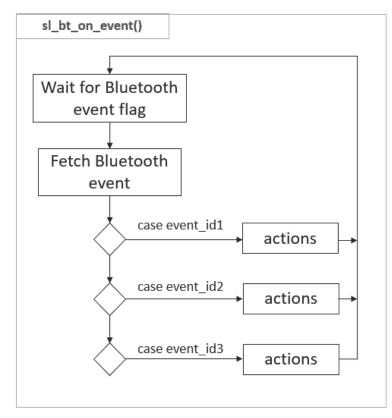

#### 4.5 Develop Proprietary Application

Proprietary application uses RAIL directly:

- RAIL API commands can be called from anywhere.
- RAIL API events have to be handled in the events callback function.

Almost all RAIL APIs can be used in DMP, but a few are incompatible (like RAIL\_HoldRxPacket()), and a few work slightly differently. For example, automatic state transitions are defined differently due to the concept of background Rx, which is specific on DMP. See *UG305: Dynamic Multiprotocol User's Guide* for details.


By default, the events callback function is set to sl\_rail\_util\_on\_event(), just like in a regular RAIL application. An empty sl\_rail\_util\_on\_event() function is implemented as a weak function in *sl\_rail\_util\_callbacks.c*. It can be overloaded in the application. This function is called every time a new radio event intended for the proprietary protocol is received from RAIL. Each RAIL event sets a specific flag in the 64-bit bitfield. Be aware that multiple flags may be set, so you may have to handle multiple events within one callback. Note: The events callback function is almost always called from an interrupt context, so you have to handle it as an interrupt handler! Do only quick calculations, and set a flag to inform your main loop about the changes.

In the DMP context, you should also prepare for more error events: RAIL\_EVENT\_SCHEDULER\_STATUS should be implemented, as that is the event which is triggered if a proprietary radio is interrupted by Bluetooth.

Upon completing a finite radio task (like transmission), RAIL\_YieldRadio() or RAIL\_Idle() should be called to let the radio scheduler know that other protocols might use the radio.

The main loop to process the radio events is implemented in the app\_proprietary\_task(), which runs parallel to the sl\_bt\_event\_handler\_task() that ultimately calls the sl\_bt\_on\_event() event handler. It is the developer's job to decide how to communicate between the radio event handler (sl\_rail\_util\_on\_event()) and the app\_proprietary\_task(), but in general use the services of the RTOS, like semaphores, flags, message queues, and so on.

The general process is shown in the following figure:

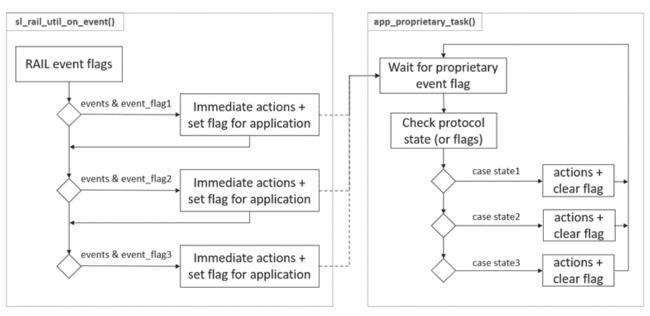

#### 4.6 Communication between Bluetooth and Proprietary Protocol

Bluetooth and the proprietary protocol are running parallel in two independent tasks. However, often they need to be synchronized, for example if you want to send out a proprietary packet when a value changed in the local GATT database, or you want to change a value in the local GATT database when you received a proprietary packet.

To notify the proprietary task from the Bluetooth task, or the other way around, the easiest way is to set an RTOS flag. You can define a queue for events and use that to notify the other task. From the proprietary task, you can also set an external event to the Bluetooth stack, using the function sl\_bt\_external\_signal(). This will generate an sl\_bt\_evt\_system\_external\_signal\_id event in the Bluetooth stack.

## 5. Examples

#### 5.1 Sending Proprietary Packets

This simple example sends out a proprietary packet every time a specific characteristic in the local GATT database is written.

- 1. Create a new Soc Empty Rail Dmp project as described in section 4.1 Create a New Project.
- 2. In the GATT configurator, add a new characteristic to the GATT database (as described in QSG169: Bluetooth® SDK v3.x Quick Start Guide) with the following parameters:
  - a. Name: Proprietary characteristic
  - b. ID: prop\_char
  - c. Value type: hex
  - d. Length: 16 byte
  - e. Properties: Read, Write, Notify
- 3. Define a CHARACTERISTIC\_CHANGED flag. This flag will be used in the communication between sl-bt-on-event() and the app\_proprietary\_task, as part of the proprietary\_event\_flags flag group.

```
#define CHARACTERISTIC_CHANGED ((OS_FLAGS)0x01)
```

4. Create a Tx FIFO. Define the following in app\_proprietary.c:

```
#define RAIL_TX_FIFO_SIZE (64)
static uint8_t txFifo[RAIL_TX_FIFO_SIZE];
```

- 5. In the Bluetooth application task (more precisely in sl\_bt\_on\_event()):
  - a. Add a new event handler to the switch case statement to handle characteristic value changes.
  - b. Check if it is the prop\_char that has changed.
  - c. Set a flag to notify the proprietary protocol.

break;

- 6. In the app\_proprietary\_task() before the infinite loop:
  - a. Set up the Tx FIFO for RAIL.
  - b. Define scheduler info for the packet to be sent.

- 7. Within the infinite loop of the app\_proprietary\_task():
  - a. Wait for the CHARACTERISTIC\_CHANGED flag.
  - b. Copy the content of the characteristic into the Tx FIFO.
  - c. Send out the packet.

```
while (DEF_TRUE) {
          RTOS_ERR err;
          OSFlagPend(&proprietary_event_flags,
                      CHARACTERISTIC_CHANGED,
                      (OS_TICK)0,
                       OS_OPT_PEND_BLOCKING
                       + OS_OPT_PEND_FLAG_SET_ANY \
                       + OS_OPT_PEND_FLAG_CONSUME,
                      NULL,
                       &err);
          sl_status_t result;;
                result = sl_bt_gatt_server_read_attribute_value(gattdb_prop_char, 0, 16, data_len,
dataPacket);
          RAIL_WriteTxFifo(railHandle, dataPacket, data_len, true);
         RAIL_StartTx(railHandle, 0, RAIL_TX_OPTIONS_DEFAULT, &txSchedulerInfo);
}
```

#### 8. In sl\_rail\_util\_on\_event():

a. Check for the packet\_sent event, and do not forget to yield the radio.

#### 5.2 Receiving Proprietary Packets

This example implements a receiver for the transmitter implemented in the previous section. Once a proprietary packet is received, the example updates a characteristic in the local GATT database.

To implement a receiver, use the transmitter project described in the previous section and extend it with the following procedure.

1. Define a new flag for signaling packet reception to the proprietary application.

```
#define PACKET_RECEIVED ((OS_FLAGS)0x02)
```

2. Create an Rx FIFO. Define the following in app\_proprietary.c:

```
#define RAIL_RX_FIFO_SIZE (64)
static uint8_t rxFifo[RAIL_RX_FIFO_SIZE];
```

- 3. In the app\_proprietary\_task() before the infinite loop:
  - a. Set Rx transition in order to automatically restore Rx state after packet reception.
  - b. Set the Rx priority lower than the Tx priority.
  - c. Start Rx (before the infinite loop!).

- 4. In the radio event handler, such as sl\_rail\_util\_on\_event():
  - a. Check if a packet was successfully received.
  - b. Copy the packet content to your local Rx FIFO.
  - c. Set a flag to notify the proprietary protocol about the new packet.

- 5. Within the infinite loop of the app\_proprietary\_task():
  - a. Check for two event flags: CHARACTERISTIC\_CHANGED and PACKET\_RECEIVED. You can wait for both of them and then check which one was set.
  - b. If the PACKET\_RECEIVED flag is set then write the content of the received packet into the local GATT database and
  - c. Notify the Bluetooth stack that the value has changed (using a Bluetooth external signal).

```
while (DEF_TRUE) {
     RTOS_ERR err;
     OS_FLAGS active_flags = OSFlagPend (&proprietary_event_flags,
                                           CHARACTERISTIC CHANGED \
                                           + PACKET_RECEIVED,
                                           (OS_TICK)0,
                                           OS_OPT_PEND_BLOCKING
                                           + OS_OPT_PEND_FLAG_SET_ANY \
                                           + OS_OPT_PEND_FLAG_CONSUME,
                                           NULL.
                                           &err);
      if (active_flags & CHARACTERISTIC_CHANGED)
      {
          sl status t result;
                result = sl_bt_gatt_server_read_attribute_value(gattdb_prop_char, 0, 16, data_len,
dataPacket);
          RAIL_WriteTxFifo(railHandle, dataPacket 16, true);
          RAIL_StartTx(railHandle, 0, RAIL_TX_OPTIONS_DEFAULT, &txSchedulerInfo);
      }
     if (active_flags & PACKET_RECEIVED)
      ł
          sl_bt_gatt_server_write_attribute_value(gattdb_prop_char,0,16,rxFifo);
          sl_bt_external_signal(CHARACTERISTIC_CHANGED);
      }
```

6. In sl\_bt\_on\_event():

- a. Add a new event handler for the external signal.
- b. Check if you got a CHARACTERISTIC\_CHANGED signal.
- c. Send out a notification.

#### 5.3 Light/Switch Example

This section provides details on working with the Light/Switch multiprotocol example code.

#### 5.3.1 Working with the Light/Switch Example

The Flex (RAIL) - Switch and Bluetooth - SoC Ligh /RAIL DMP applications are generated, built, and uploaded in the same way as other applications in their SDKs.

- To see details about installing Simplicity Studio and the Flex SDK and building an example application, see QSG168: Proprietary Flex SDK v3.x Quick-Start Guide.
- To see details about installing Simplicity Studio and the Bluetooth SDK and building an example application, see QSG169: Bluetooth® SDK v3.x Quick-Start Guide.

**Note:** In a demonstration configuration with multiple RAIL/Bluetooth dynamical protocol light devices and a single switch device, unpredictable behavior may occur. We recommend testing with a single light device and a single switch device.

The following summary procedures are provided for your convenience.

#### 5.3.2 Building the RAIL:Switch Application

- 1. Open Simplicity Studio 5.
- 2. Select a connected device in the Debug Adapters view.
- 3. Select File > New > Silicon Labs Project Wizard ...
- 4. Review the SDK and toolchain, and change as necessary. Click **NEXT**.
- 5. On the Example Project Selection dialog, filter on Proprietary and select Flex (RAIL) Switch. Click NEXT.
- 6. Name your project. Click [FINISH].
- 7. Either automatically compile and flash using the debug button, or manually compile and then load.

Application load success indicators are code-dependent. With the Flex (RAIL) - Switch example, the LCD displays a short menu before changing over to the light bulb display.



#### 5.3.3 Building the Bluetooth Light Application

The Bluetooth Light application requires the Gecko Bootloader to be loaded on the device. The Gecko Bootloader is loaded when you load the precompiled **SOC-Light-Rail-Dmp** demonstration. Alternatively you can build and load your own Gecko Bootloader combined image (called <projectname>-combined.s37), as described in UG266: Silicon Labs Gecko Bootloader User's Guide for GSDK 3.2 and Lower or UG489: Silicon Labs Gecko Bootloader User's Guide for GSDK 4.0 and Higher.

1. Open Simplicity Studio 5.

- 2. Select the connected device in the Debug Adapters view.
- 3. Select File > New > Silicon Labs Project Wizard ...
- 4. Review the SDK and toolchain, and change as necessary. Click NEXT.
- 5. On the Example Project Selection dialog, filter on Bluetooth and select Soc Light Rail Dmp. Click NEXT.
- 6. Name your project. Click [FINISH].
- 7. Either automatically compile and flash using the debug button, or manually compile and then load.

Application load success indicators are code-dependent. With the **Bluetooth - SoC Light RAIL DMP** example, the LCD displays a light bulb.



#### 5.3.4 Changing the PHY Configuration

The default PHY configuration for the RAIL/Bluetooth example is a sub-gigahertz configuration. You may want to modify this PHY configuration as you begin to develop applications for your own hardware.

To change the PHY configuration:

- 1. Open the Flex (RAIL) Switch project.
- 2. Open the .slcp file in the project, and click the **Configuration Tools** tab.
- 3. Click **Open** next to Radio Configurator.
- 4. Select a new PHY.
- 5. The new config will be generated into the folder *autogen*, with the names of rail\_config.c and rail\_config.h.
- 6. Open the Bluetooth SoC Light RAIL DMP project.
- 7. Import the modified radio configuration file (radio\_settings.radioconf) from the Switch project.
- 8. Rebuild and flash both projects as you would normally.

## Smart. Connected. Energy-Friendly.



www.silabs.com/products



Quality www.silabs.com/quality



Support & Community www.silabs.com/community

#### Disclaimer

Silicon Labs intends to provide customers with the latest, accurate, and in-depth documentation of all peripherals and modules available for system and software implementers using or intending to use the Silicon Labs products. Characterization data, available modules and peripherals, memory sizes and memory addresses refer to each specific device, and "Typical" parameters provided can and do vary in different applications. Application examples described herein are for illustrative purposes only. Silicon Labs reserves the right to make changes without further notice to the product information, specifications, and descriptions herein, and does not give warranties as to the accuracy or completeness of the included information. Without prior notification, Silicon Labs may update product firmware during the manufacturing process for security or reliability reasons. Such changes will not alter the specifications or the performance of the product. Silicon Labs shall have no liability for the consequences of use of the information supplied in this document. This document does not imply or expressly grant any license to design or fabricate any integrated circuits. The products are not designed or authorized to be used within any FDA Class III devices, applications for which FDA premarket approval is required or Life Support Systems without the specific written consent of Silicon Labs. A "Life Support System" is any product or system intended to support or sustain life and/or health, which, if it fails, can be reasonably expected to result in significant personal injury or death. Silicon Labs products are not designed or authorized for military applications. Silicon Labs product shall under no circumstances be used in weapons of mass destruction including (but not limited to) nuclear, biological or chemical weapons, or missiles capable of delivering such weapons. Silicon Labs disclaims all express and implied warranties and shall not be responsible or liable for any injuries or damages related to use of a Silicon Lab

#### **Trademark Information**

Silicon Laboratories Inc.<sup>®</sup>, Silicon Laboratories<sup>®</sup>, Silicon Labs<sup>®</sup>, SiLabs<sup>®</sup> and the Silicon Labs logo<sup>®</sup>, Bluegiga<sup>®</sup>, Bluegiga Logo<sup>®</sup>, EFM<sup>®</sup>, EFM32<sup>®</sup>, EFR, Ember<sup>®</sup>, Energy Micro, Energy Micro logo and combinations thereof, "the world's most energy friendly microcontrollers", Redpine Signals<sup>®</sup>, WiSeConnect, n-Link, ThreadArch<sup>®</sup>, EZLink<sup>®</sup>, EZRadio<sup>®</sup>, EZRadio<sup>®</sup>, Gecko<sup>®</sup>, Gecko OS, Gecko OS Studio, Precision32<sup>®</sup>, Simplicity Studio<sup>®</sup>, Telegesis, the Telegesis Logo<sup>®</sup>, USBXpress<sup>®</sup>, Zentri, the Zentri logo and Zentri DMS, Z-Wave<sup>®</sup>, and others are trademarks or registered trademarks of Silicon Labs. ARM, CORTEX, Cortex-M3 and THUMB are trademarks or registered trademarks of ARM Holdings. Keil is a registered trademark of ARM Limited. Wi-Fi is a registered trademark of the Wi-Fi Alliance. All other products or brand names mentioned herein are trademarks of their respective holders.



Silicon Laboratories Inc. 400 West Cesar Chavez Austin, TX 78701 USA

## www.silabs.com